

# E. L. Foust Co., Inc.

800-EL-FOUST (353-6878)  
P.O. Box 105 Elmhurst, IL 60126  
www.foustco.com  
Email sales@foustco.com

## OILING INSTRUCTIONS FOR 160 SERIES AIR PURIFIERS

These instructions are for 160R2 and 160DT units with an on/off switch on the power cord. 160 R2 units after 1989 do not require oiling, 160DT units after 2004 do not require oiling.

Motor manufacturers recommend that the motors be oiled every 6 months of use with one or two drops of E-Z-1 synthetic lubricant in each of the two oil holes. *(Please refer to diagram on back for location oil holes)*  
As with all products, if you are chemically sensitive, you should test yourself for tolerance prior to using on the air purifier. Please note that using vegetable oils, or other non-recommended oils will damage the motor and void any warranty.

Do not be concerned if the motor runs warm to the touch. There is a thermal protection device that will automatically shut down the motor temporarily if it becomes too hot.

## REQUIRED MAINTENANCE

All 160R2 and 160DT Air Purifier motors need to have vent holes vacuumed and blown out every 6 months also.

*(Please refer to diagram on back for vent hole locations)*

## **\* DISCONNECT FROM ELECTRICAL SOURCE BEFORE SERVICING\***



### **E-Z-1 is:**

- Non-flammable
- Essentially non-toxic
- Non-aerosol
- Biodegradable
- and contains no solvents.
- does not conduct electricity.

### **E-Z-1 Provides:**

Superior lubrication and corrosion protection for practically everything; including steel, brass, copper, aluminum, and wood. Penetration power loosens rusty nuts & bolts. Dissolves tar & asphalt.

# DIAGRAM

